

2.8. Information to the driver

2.8.1. The following information shall be indicated to the driver:

- the system status “active” with at least an optical signal,
- a warning [if the driver is not detected to be available to take over manual control] as specified in section 2.6
- any failure of the system with at least an optical signal unless the system is manually deactivated (off mode),
- transition demands as specified in section 2.7.
- an on-going minimal risk manoeuvre with an optical and either an acoustic or haptic warning signal
- an ongoing emergency manoeuvre with an optical warning.

2.8.2. The optical signal during the transition phase and the minimal risk manoeuvre to indicate to the driver to take over manual control of the vehicle shall consist of a pictorial information showing hands and the steering control and may be accompanied by additional explanatory text or warning symbols as shown below.

Latest with the start of a minimal risk manoeuvre at least the hands or the steering control in the pictorial information provided as optical signal shall be shown in red.



Example 1.



Example 2.

